


PRE-STUBBED FACT


1

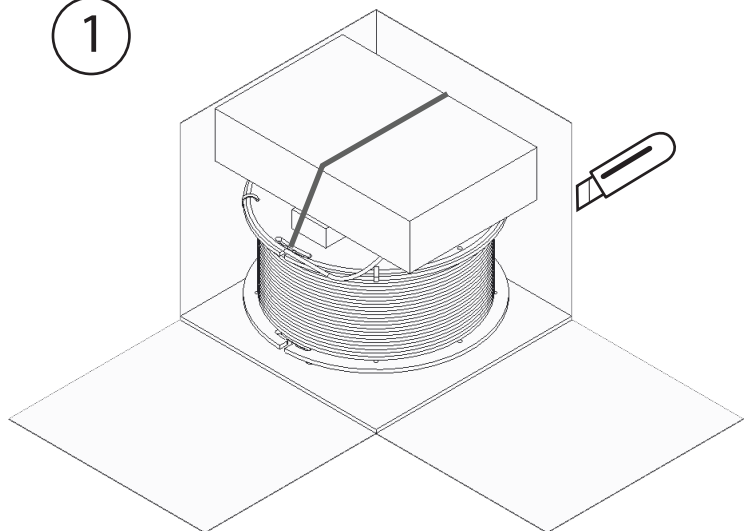


Cut the 4 corners of the cardboard box to remove it.

Decoil the cable, by pulling it. The reel will spin during decoiling.

2

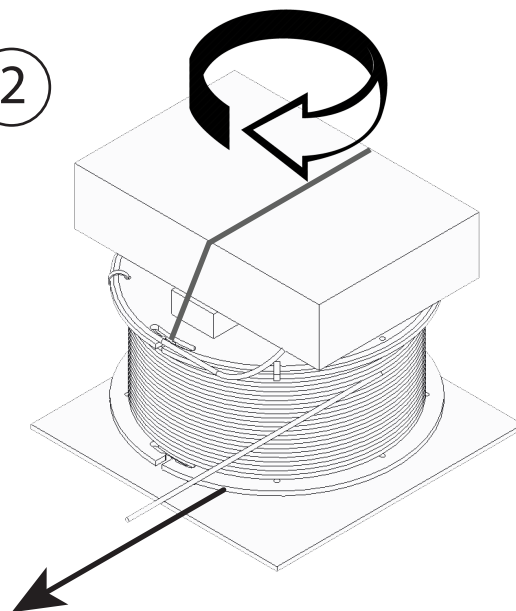

3

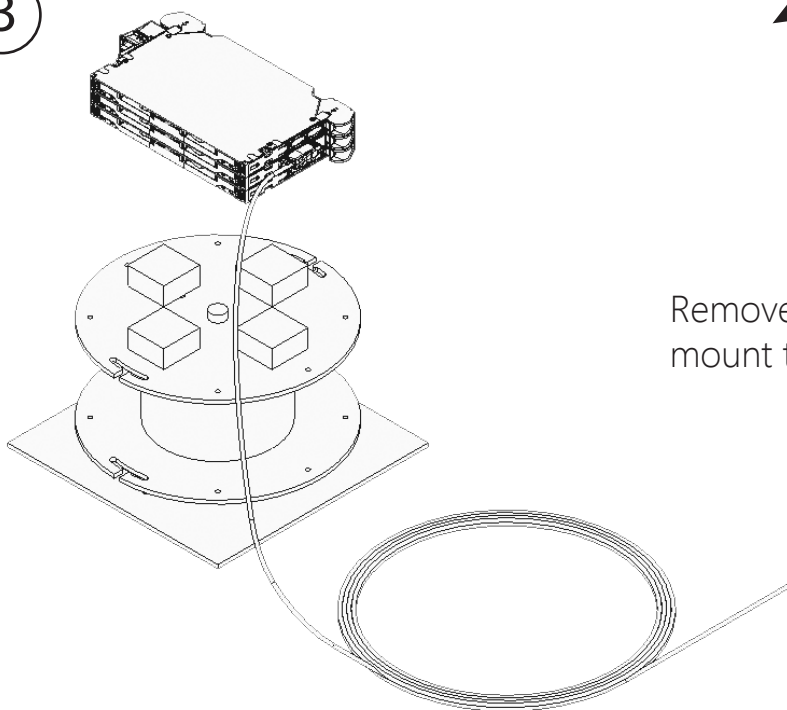

Remove the straps. Unpack the elements and mount them in the frame.